
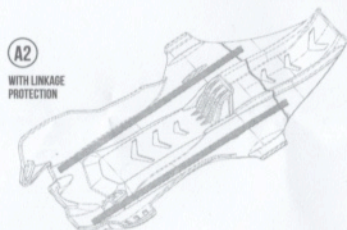


SKID PLATE PROTECTION . MOUNTING INSTRUCTIONS

PARTS INCLUDED

(A) x1 (A1 OR A2)

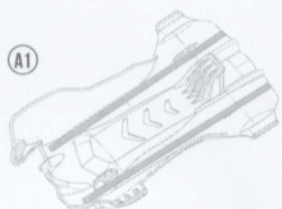

(B) x2




(C) x1



(D) x1


1

Place the 2 stripes of sponge on the designated area of the Skid Plate protector.

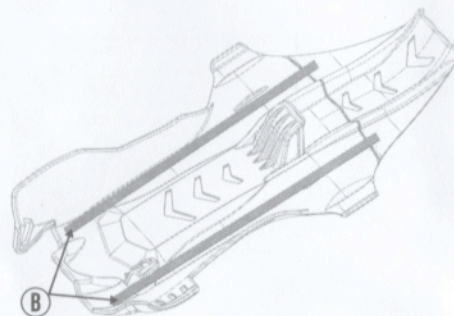


2

Position the skid plate on the frame of the motorbike. If you're using the version with the linkage protection, you might have to apply a bit more pressure to position the part

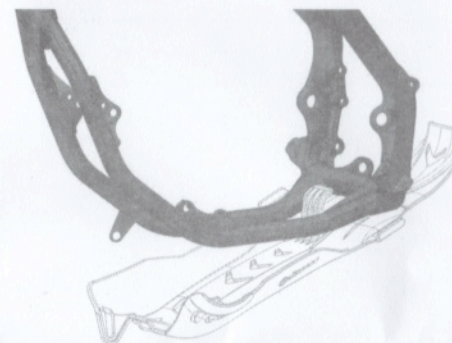




3

Position the skid plate on the frame of the motorbike.

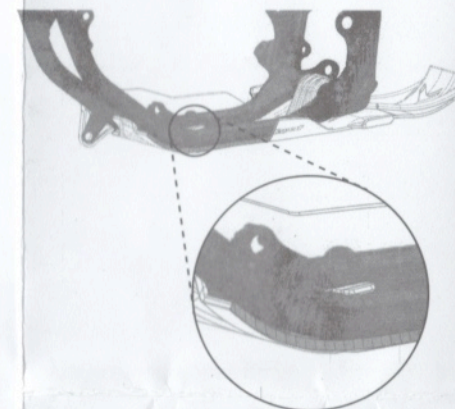

4

After that you'll need to mount the hardware to hold the skid plate to the bike. Use the hardware provided to replace the stock bolts.

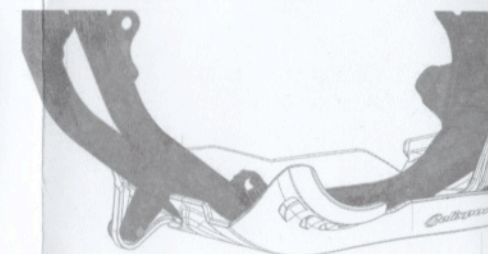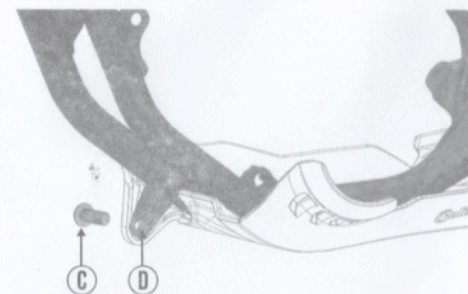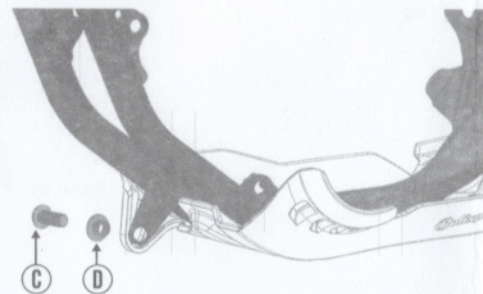

WARNINGS

YOU SHOULD REMOVE AND CLEAN THE SKID PLATE AND FRAME AFTER EACH USE TO AVOID SCRATCHES AND DAMAGES. POLISPORT WON'T BE HELD RESPONSIBLE FOR PRODUCTS THAT ARE INCORRECTLY INSTALLED OR USED IN AN INAPPROPRIATE WAY. DO NOT RIDE IF THERE IS ANY DAMAGED OR MISSING HARDWARE. IN THIS CASE, YOU SHOULD TAKE THE PART BACK TO YOUR DEALER. MAKE SURE THE THROTTLE AND OTHER CONTROLS ARE FREE EVERY TIME YOU RIDE. PAY ATTENTION TO THE MOUNTING INSTRUCTION AND WARNINGS TO AVOID INTERFERENCE WITH CONTROLS AND/OR ACCIDENTS.